
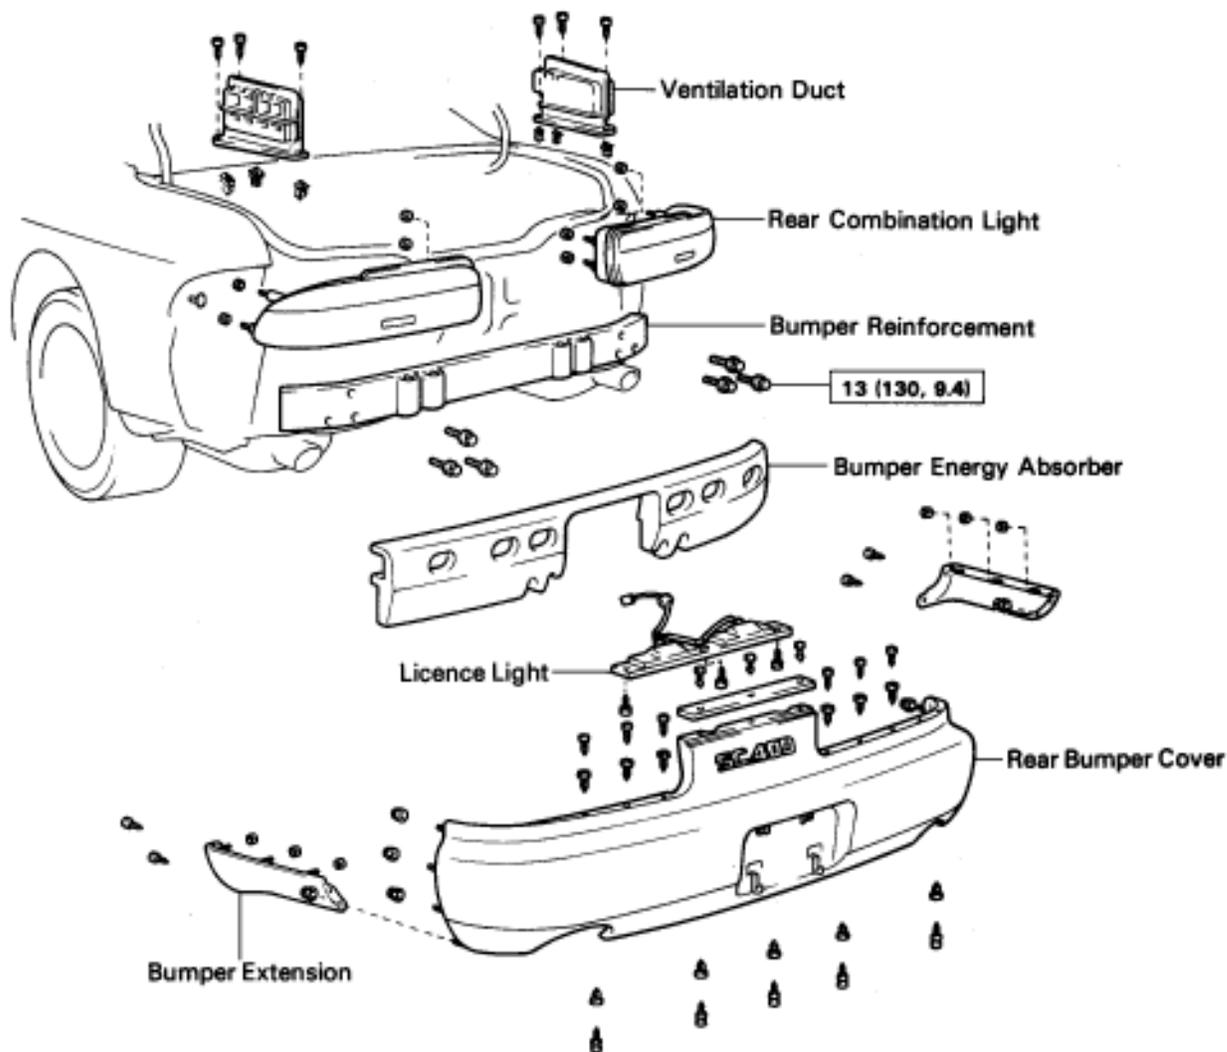


# Rear Bumper COMPONENTS

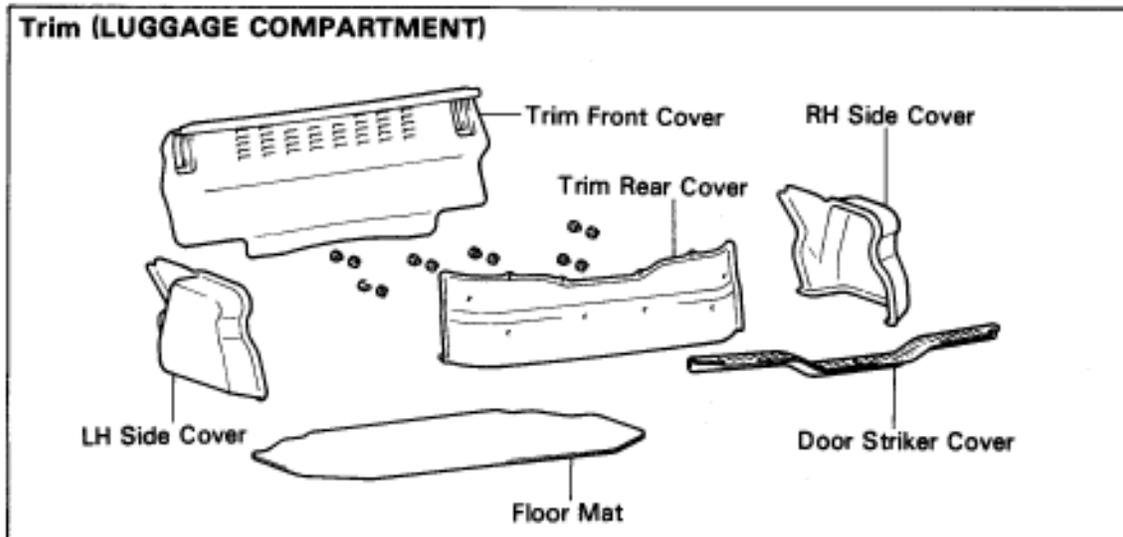

**N·m (kgf·cm, ft·lbf) : Specified torque**

BO6758


## REMOVAL OF REAR BUMPER

(See page [BO-15](#))

### 1. REMOVE FOLLOWING PARTS:


(See steps 1 to 6 on pages [BO-79](#) to 80)

- (a) Floor mat
- (b) Door striker cover
- (c) Trim rear cover
- (d) Trim front cover
- (e) LH side cover
- (f) RH side cover

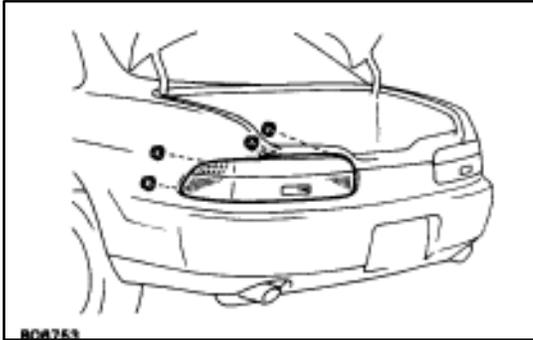

### 2. REMOVE REAR COMBINATION LIGHT

- (a) Remove four nuts and disconnect the connectors.
- (b) Remove the light.

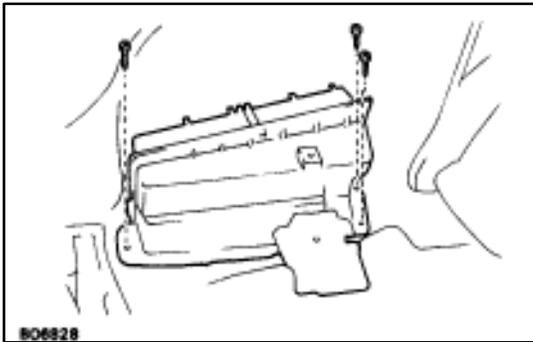



### 3. REMOVE VENTILATION DUCT

Remove three screws and the duct.


### 4. REMOVE REAR BUMPER COVER

- (a) Remove sixteen clips and six nuts.
- (b) Remove the cover.

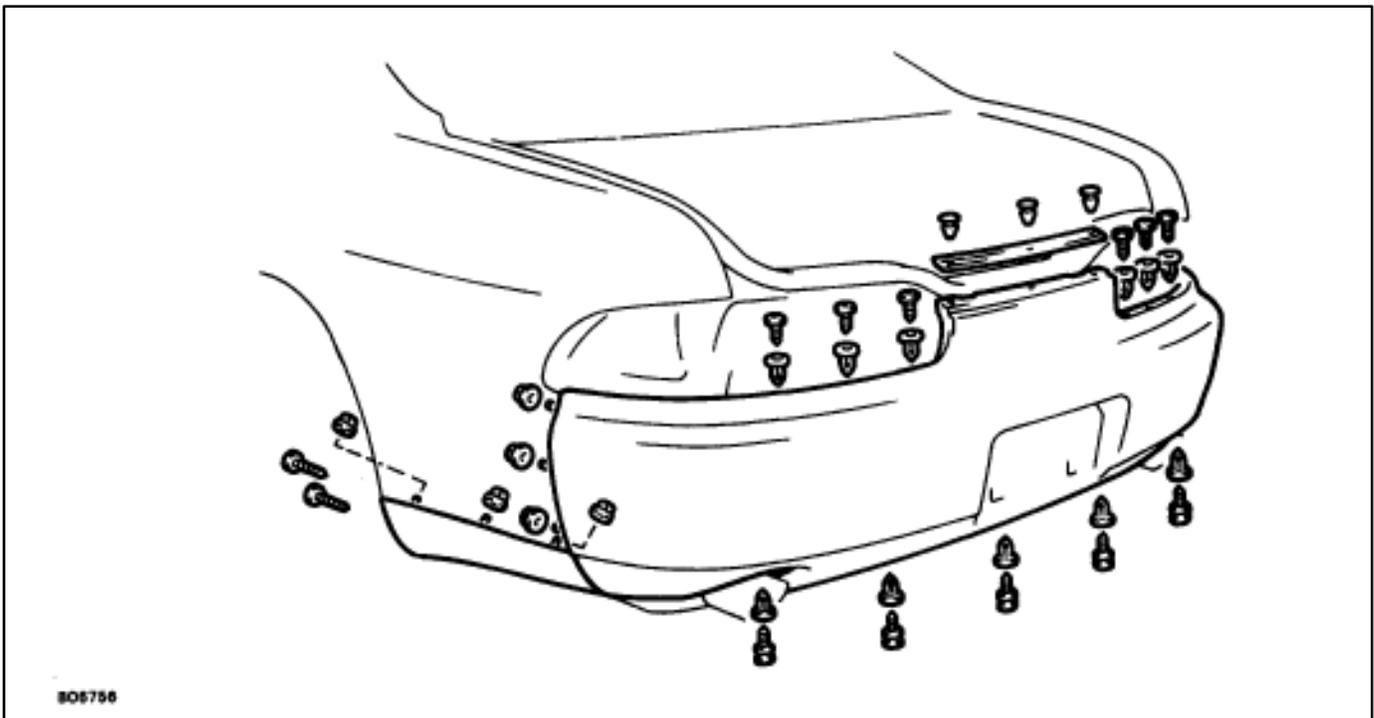

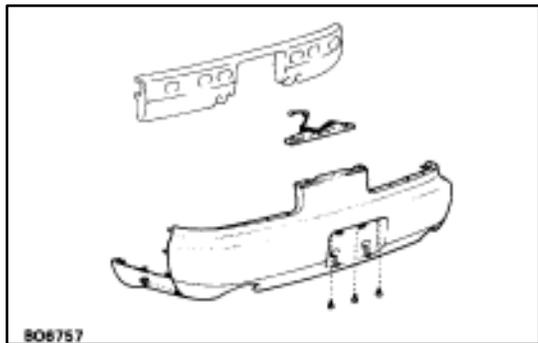

- 5. REMOVE LICENCE LIGHT AND BUMPER EXTENSION**
- (a) Remove the bumper energy absorber from the bumper cover.
  - (b) Remove three screws and the light.
  - (c) Remove the nut and the extension.

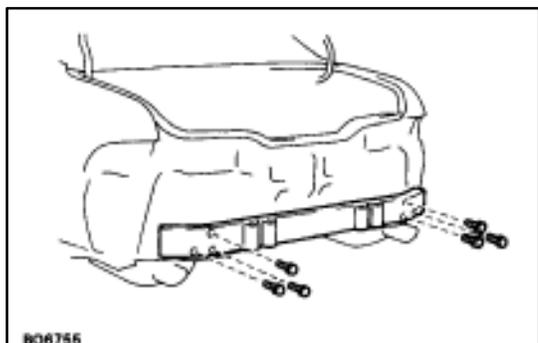

- 6. REMOVE BUMPER REINFORCEMENT**
- Remove six bolts and the reinforcement.

## INSTALLATION OF REAR BUMPER

(See page [BO-15](#))

**INSTALL REAR BUMPER PARTS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE**